

Pure 98 Operation Manual



- 1) Hook up shop air (the machine should be hooked up to shop air at all times)
- 2) Attach hoses to all four tire valves and open ball valves
- 3) Turn valve #3 to VENT TIRES. When deflated turn valves #1 and #2 to the left (vacuum on) for approximately 1 minute to vacuum tires.
- 4) Turn valve #1, #2 and #3 OFF.
- 5) Fill the tires with N2 by turning valve #2 to N2 ON
- 6) Set tire pressure regulator to desired pressure and open valve #3
- 7) Periodically turn valve #2 to OFF to check tire pressure
- 8) At desired pressure turn valves #2 and #3 off and disconnect hoses from tires.
N2 Test Port analyzer optional, always keep this port closed.

Operation Instructions

	Valve #1	Valve #2	Valve #3
Empty Tires	↑	↑	→
Vacuum tires for 1 minute	←	←	←
Fill tires with N2 and set pressure with regulator	↑	→	←