

SYSTEM 1 INSTRUCTIONS:

To Fill New Oil

- 1) Pour new oil into the oil tank. If using a conditioner pour it into the tank first.
- 2) Turn diverter valve to EXCHANGE FILL/DRAIN
- 3) Couple the two blue hoses (System One & System Two) together with adapter #. Connect an open end hose adapter to the black hose (System 1) and place it into used fluid tank.
- 4) Connect the power cord to a 12 volt DC battery (RED +, BLACK -), the SERVICE FINISHED light will come on.
- 5) Turn on the NEW OIL Switch on the remote to pump new oil from new oil tank from System 2 into System 1. Draining the used fluid out of System 1

