

## Pressure Sensor Test

Hook up ATS Machine to 12 volt power source. Put a fitting on one of the black hoses. Then place the hose into the fill neck of the new oil tank of ATS machine. Press PSI time button once, the Pressure sensor will come up on display on the screen.



Press 05 15 – the display then will go back to circulating, this needs to be done or will not work.



Press Fill 3 0 – Press Start – the pump should be running and then press PSI/ Time button. This will show fill pressure reading.



Press PSI/Time Button again this will show Drain Pressure sensor reading. These two reading should be within 2 - 8 lbs of each other

