

Troubleshooting

ATS 300E

No Power – Check battery connectors. Check continuity of both red and black wire. Check the switch and for any loose wires. Check the fuse and also check the fuse on the main circuit board

Error 0 – Motor may be disengaged from pump. Optical sensor wire connection maybe poor. Metal piece stuck in the pump gear.

Error 3 – Optical sensor wire connection may be poor. Clean Optical eye.

Leaky sensor on circuit board – change circuit board

Error 7 – change temp sensor.

Over filling transmission – check temp sensor. Possibly oil in the regulator. Clean out regulator by spraying brake cleaner into air connector, then attach air hose and pull on the pressure relief ring. Contamination in the solenoid valve you need to perform a back flush

Under filling transmission – check temp sensor